 


Saar Modules

 
Disassembly

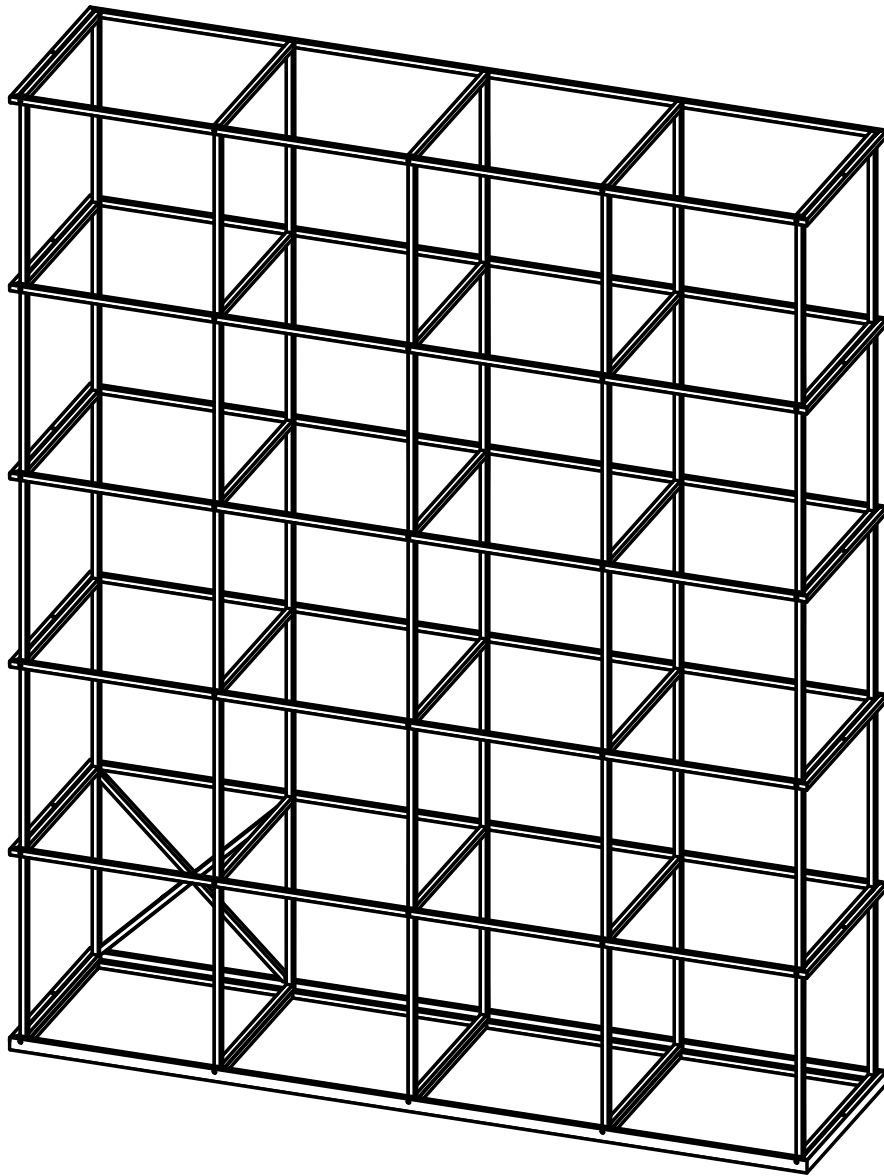


bejot:

1


Front

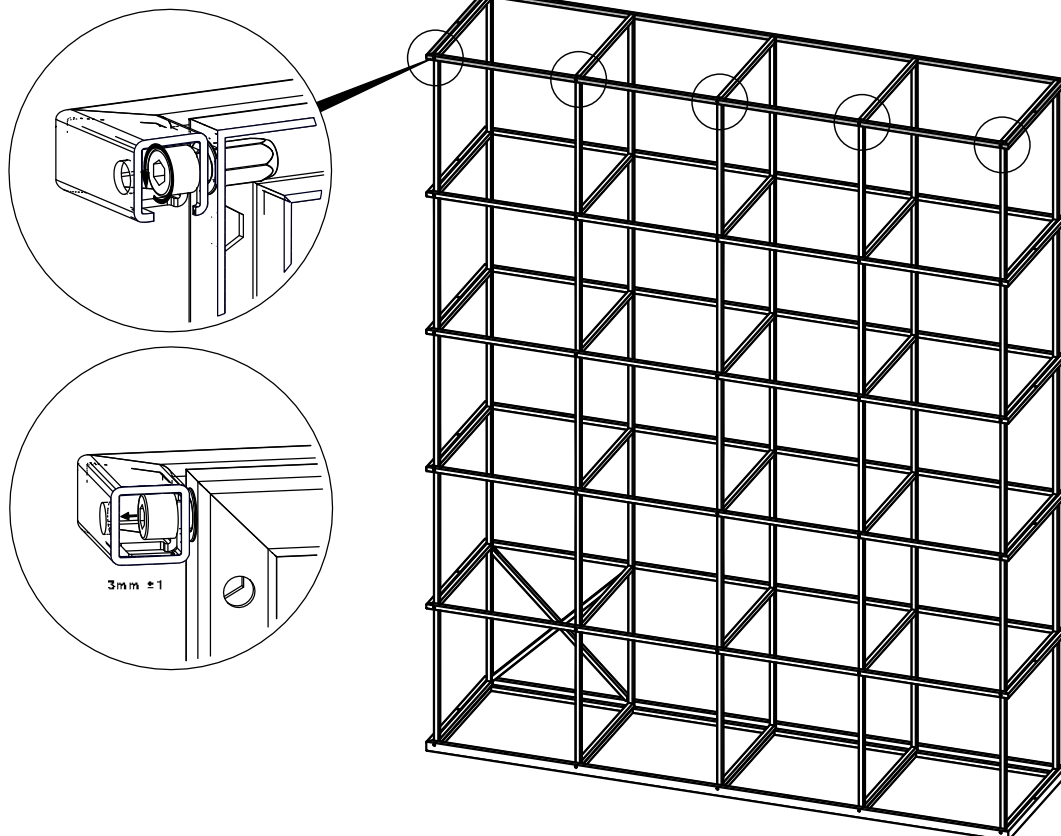


Back

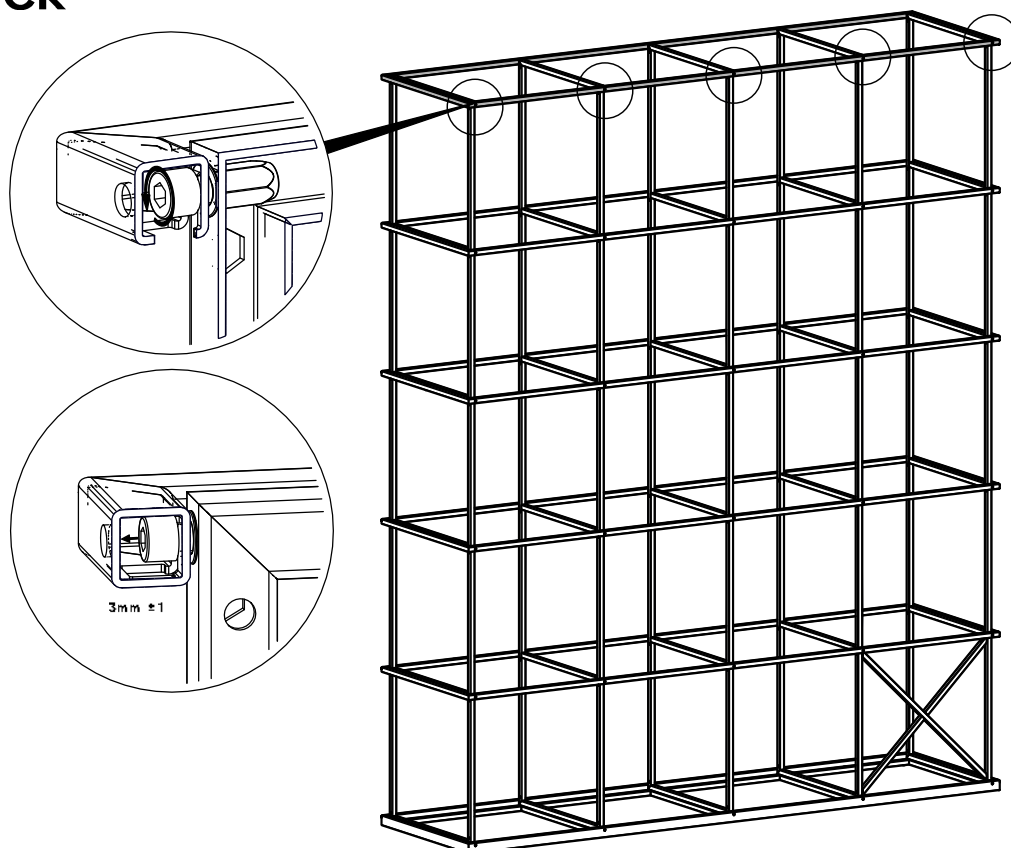 

2

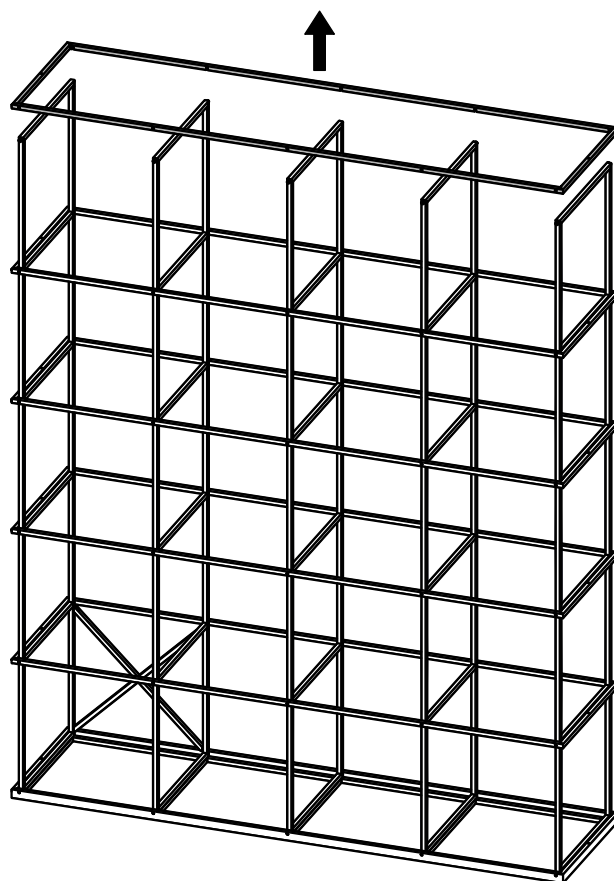 


3

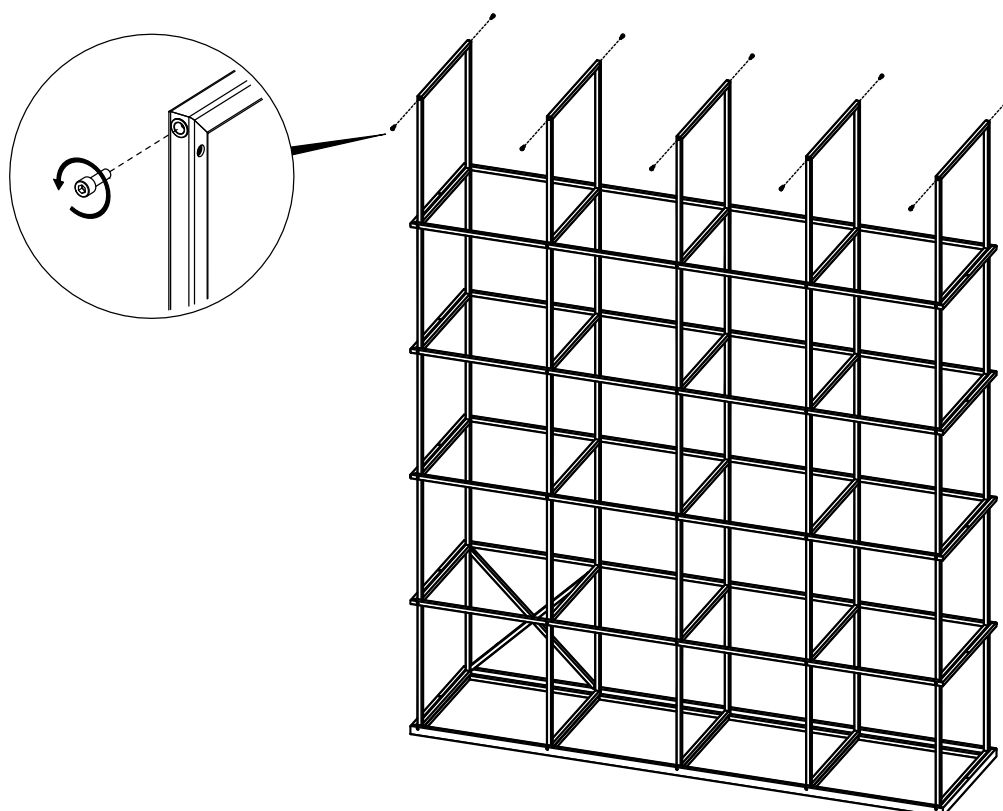 


4

 
Front

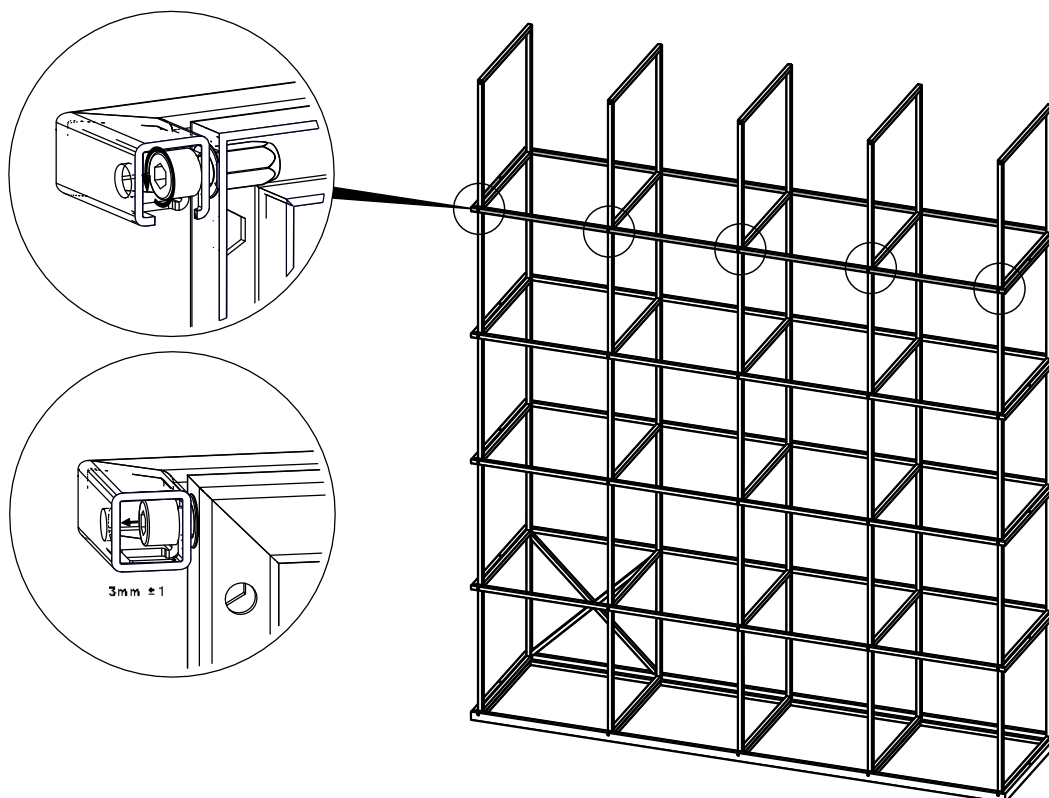


Back

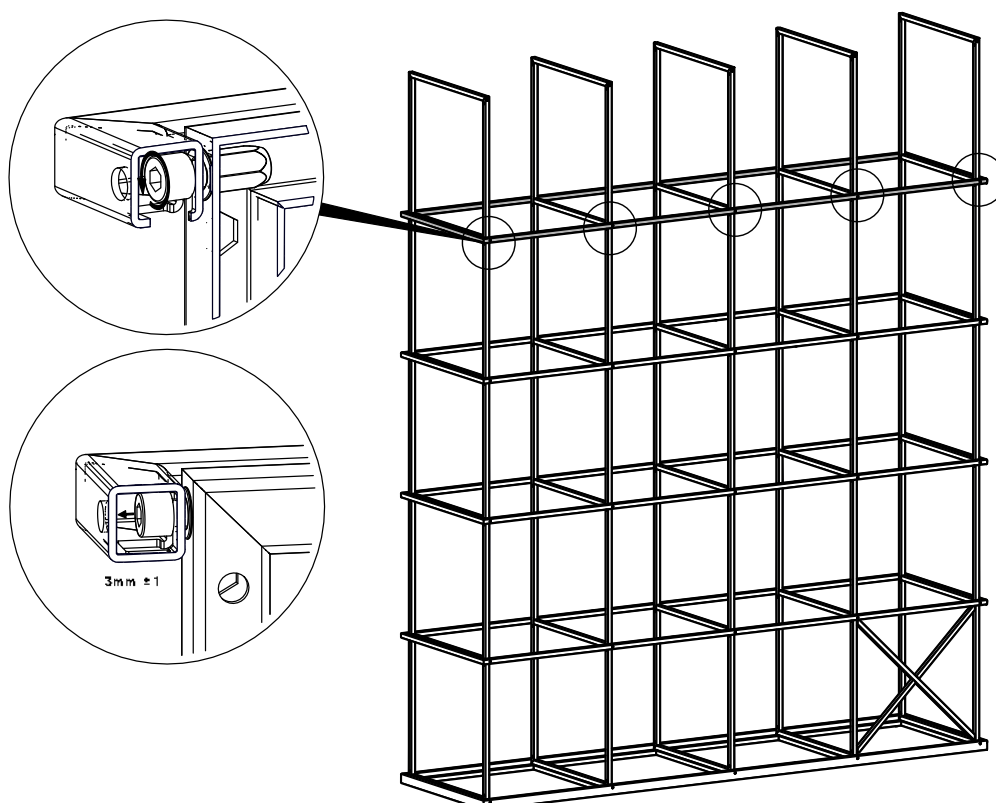 

5

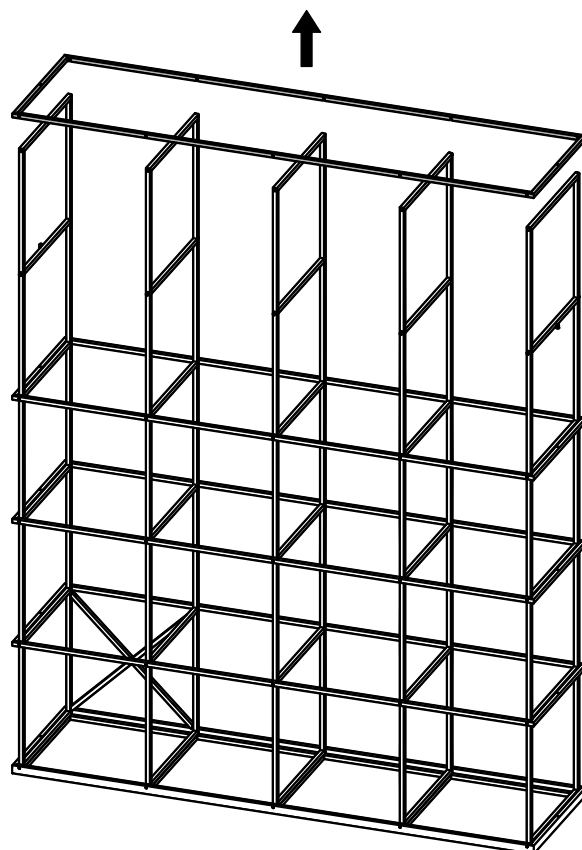 


6

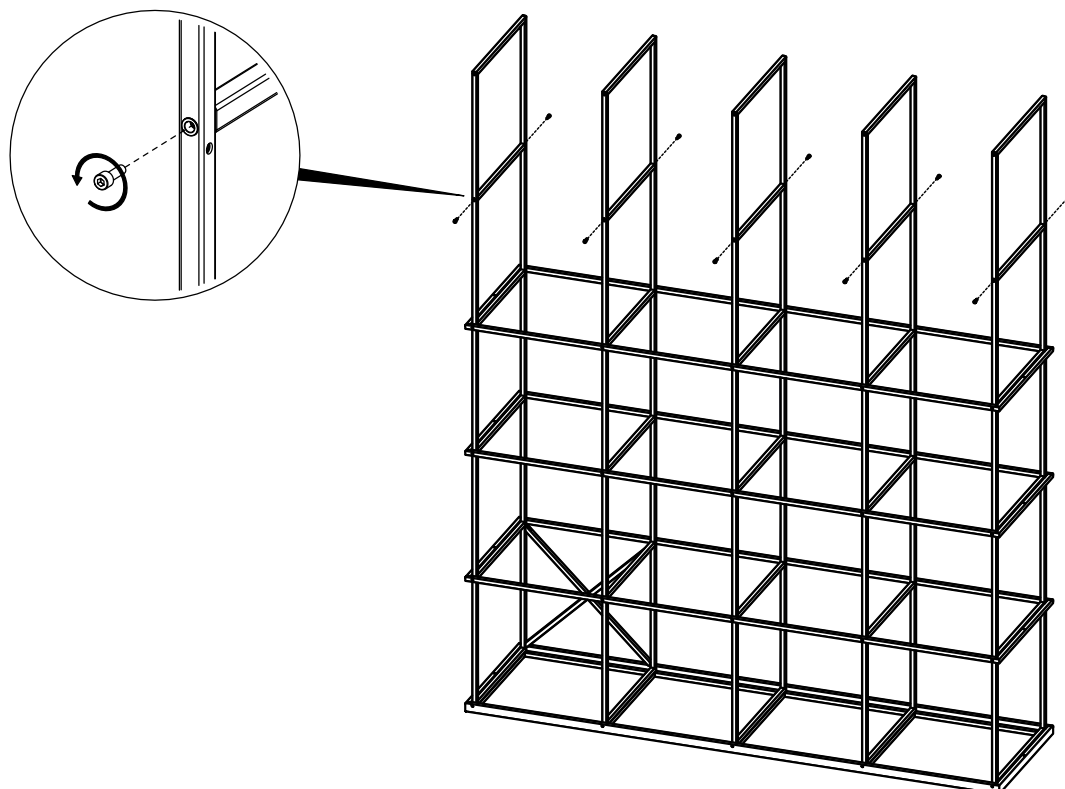 


7

 
Front

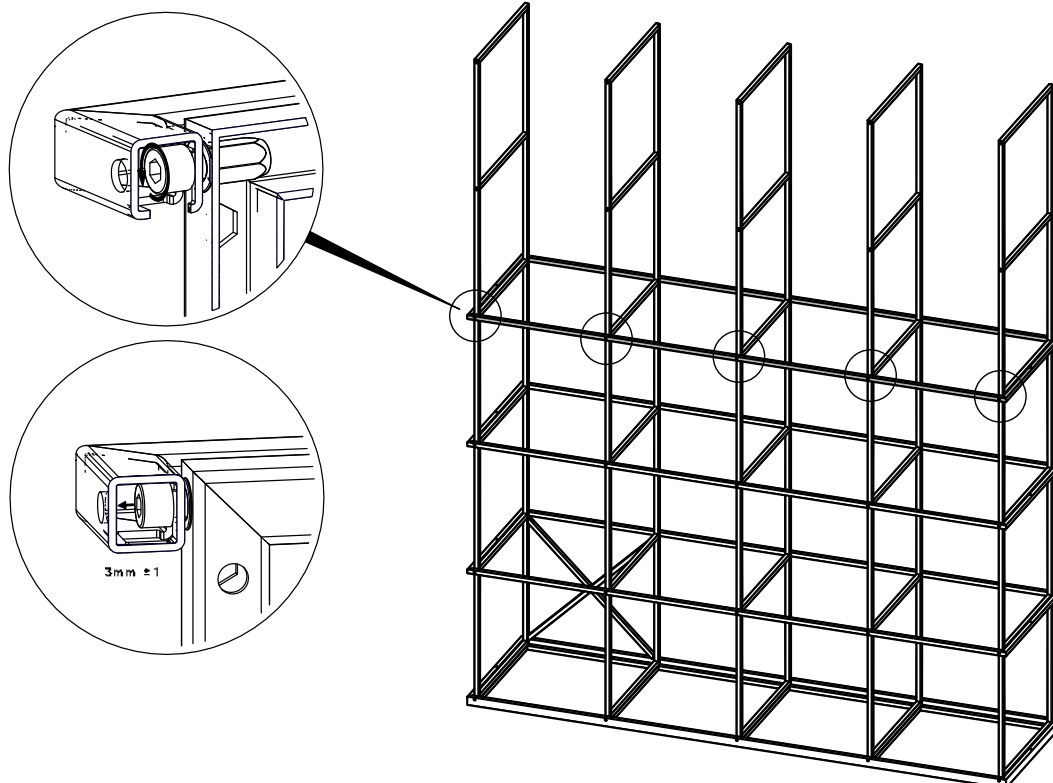


Back

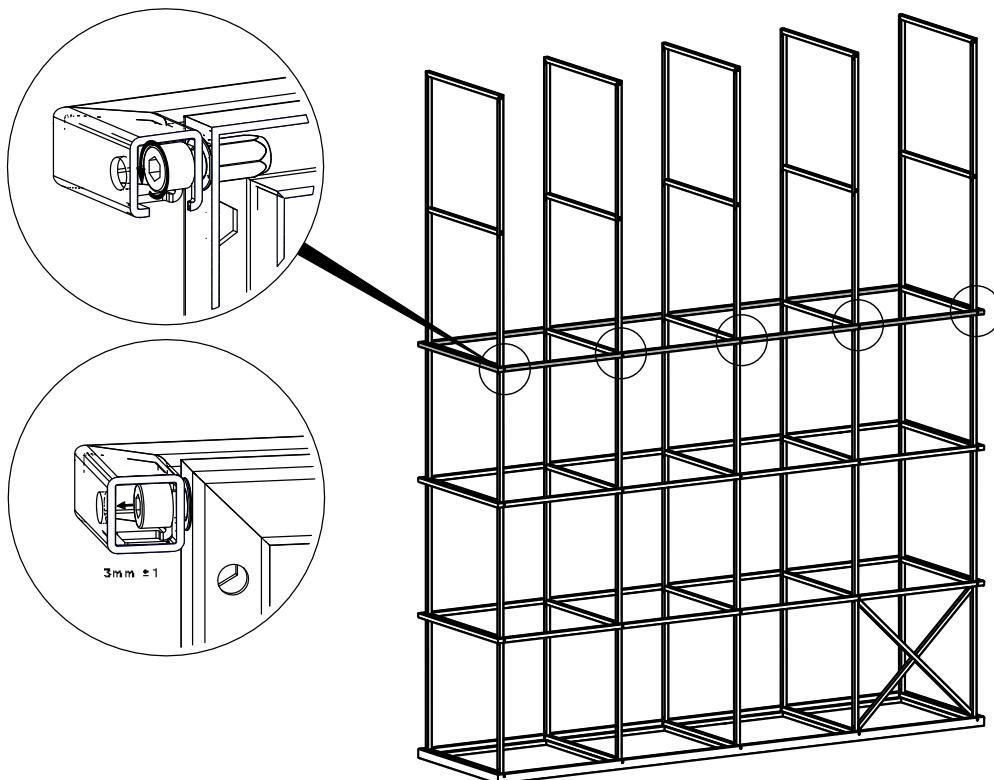 

8

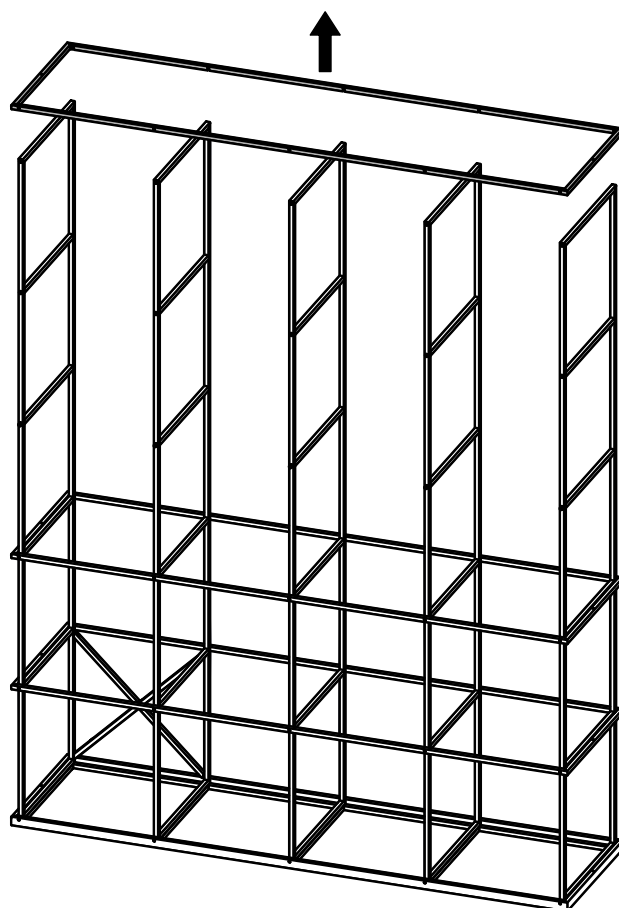 


9

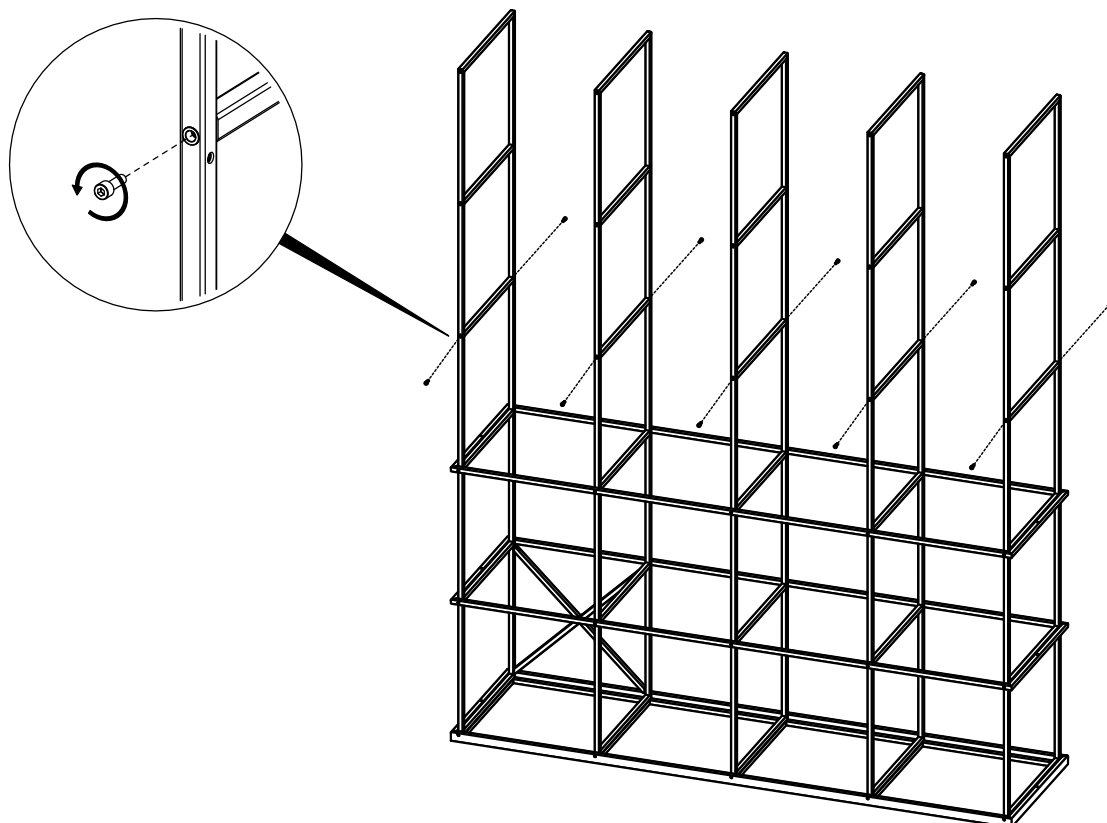 


10

 
Front

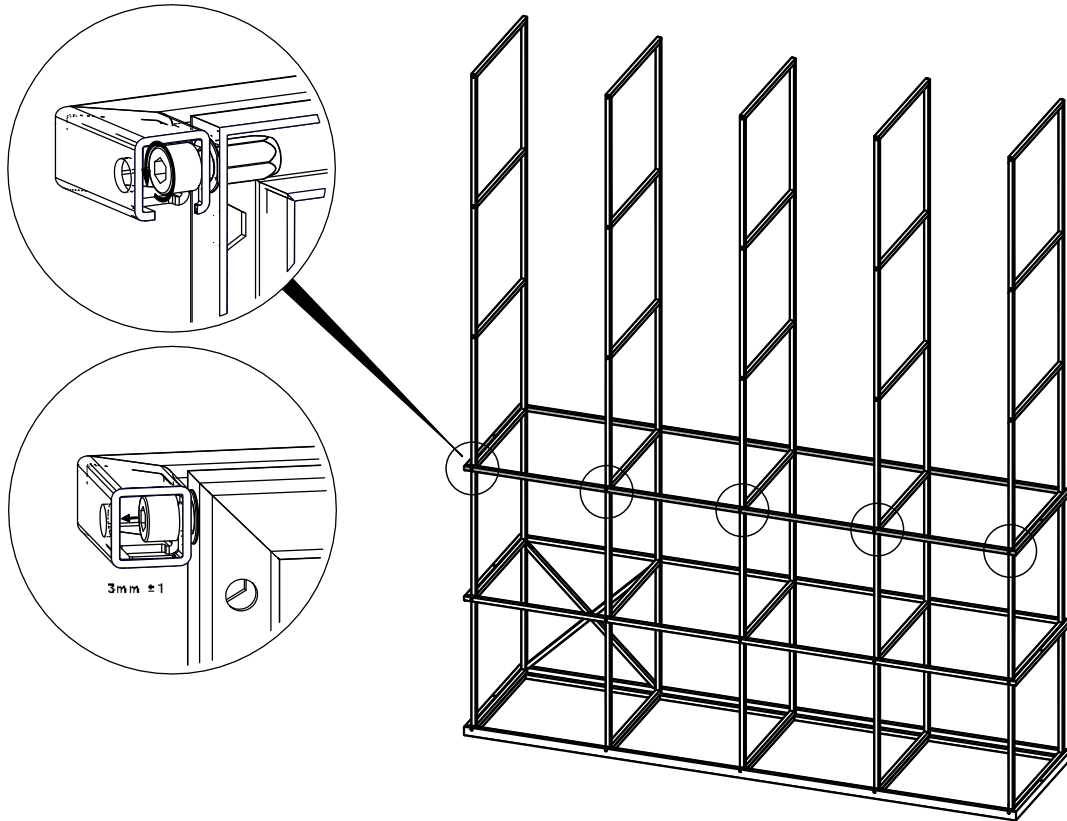


Back

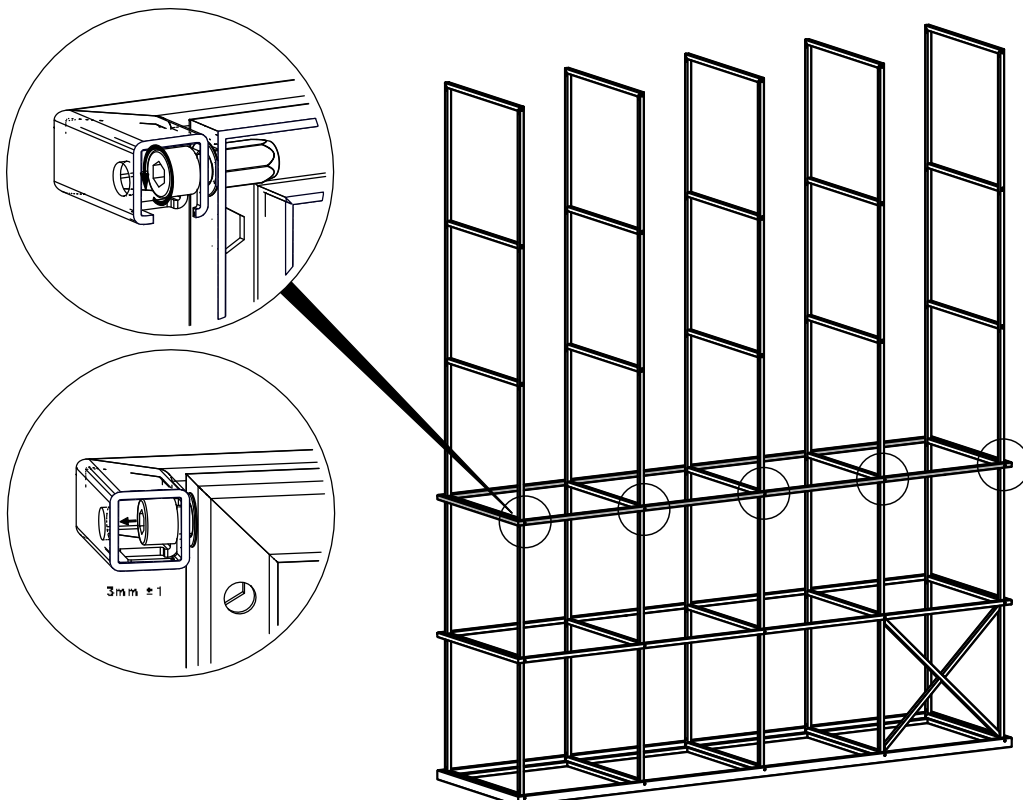 

11

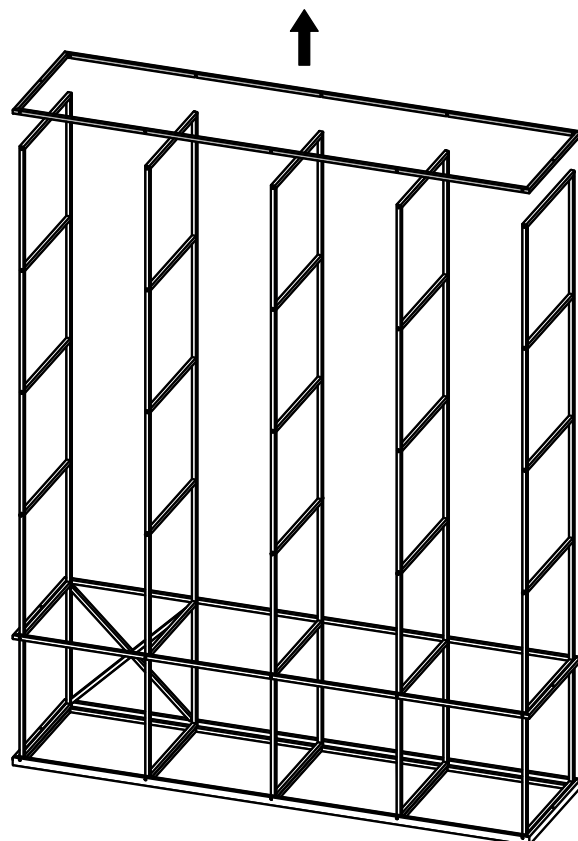 


12

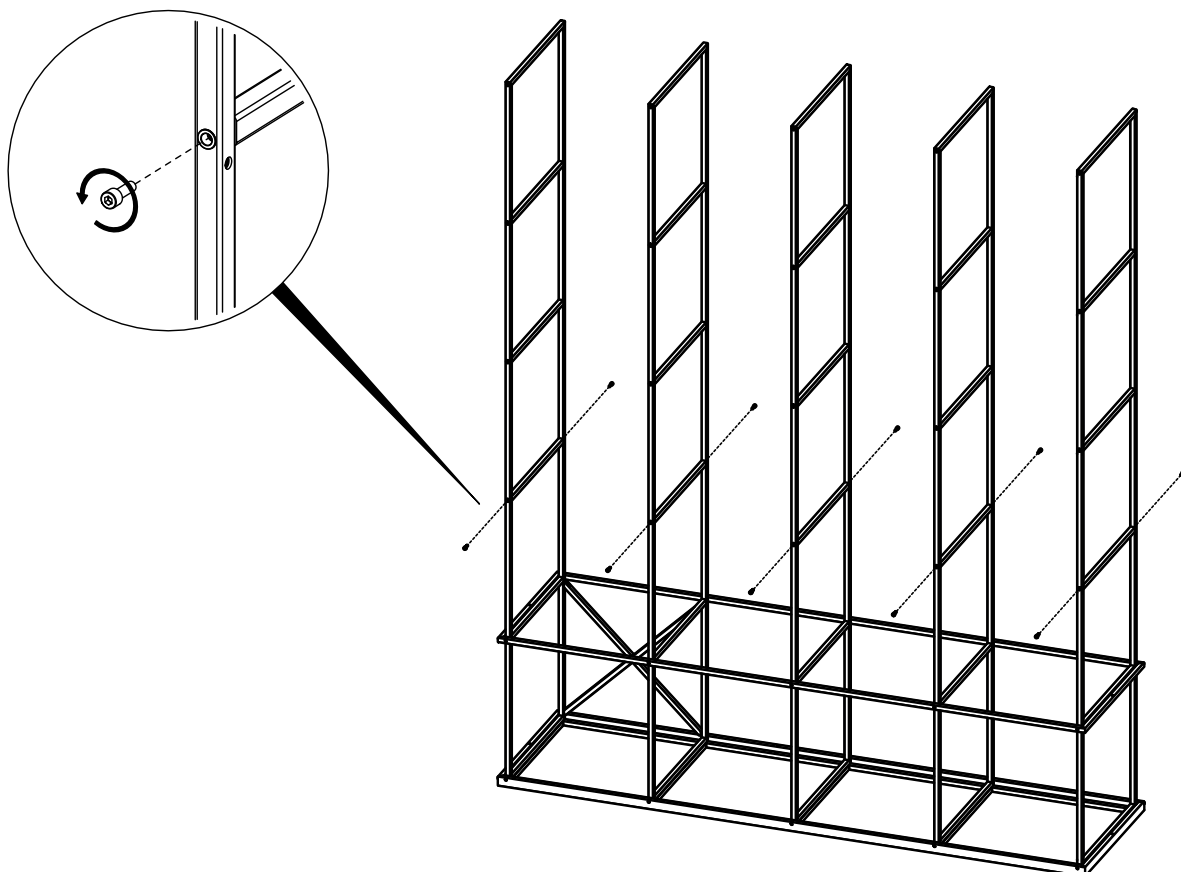 


13

 
Front

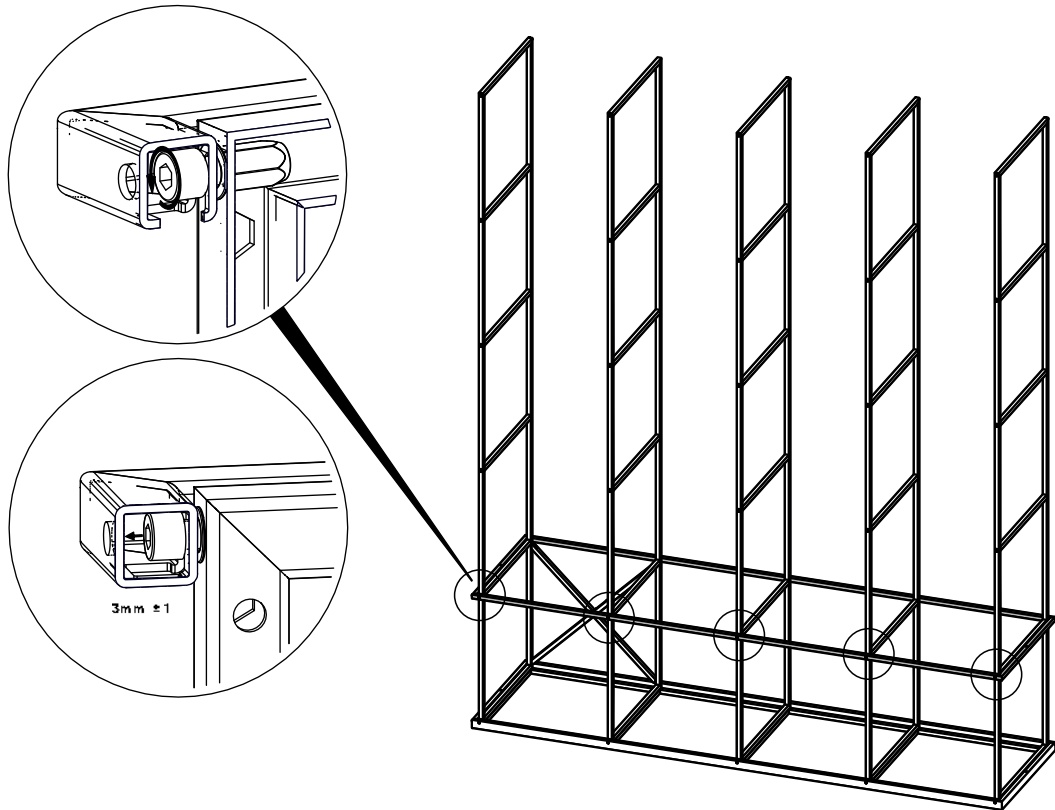


Back

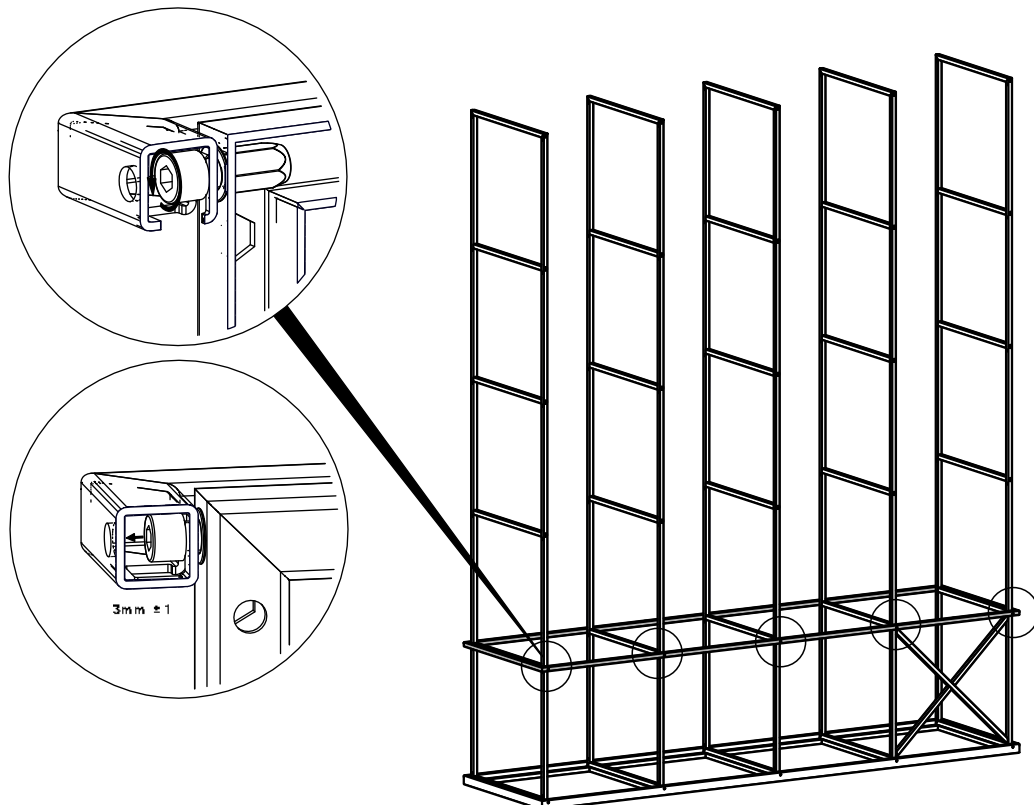 

14


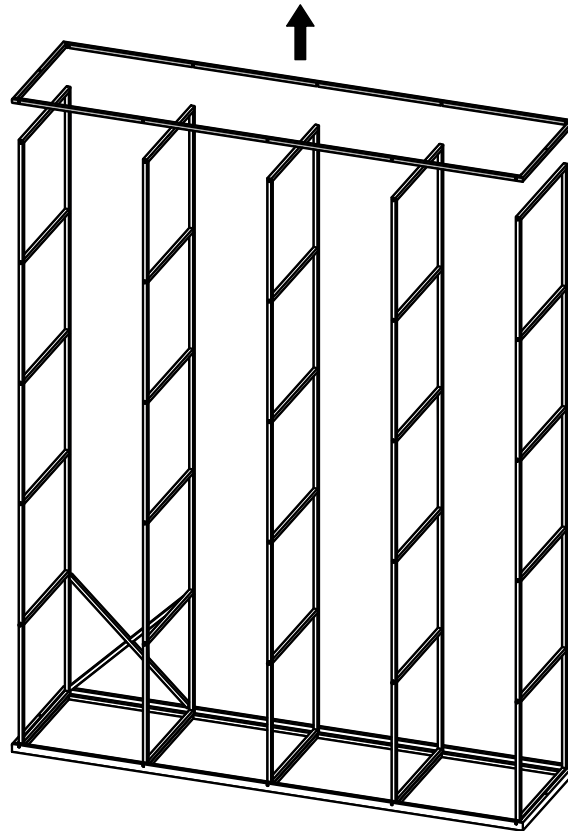 


15

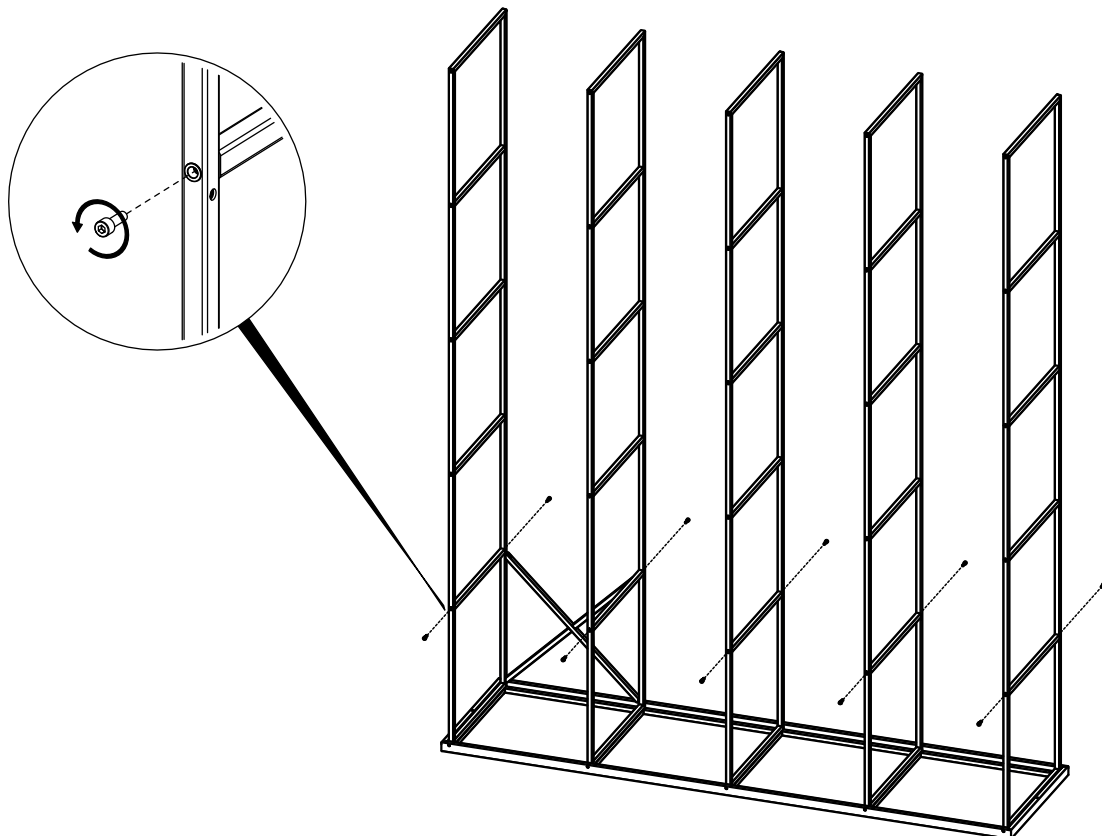 


16

  Back

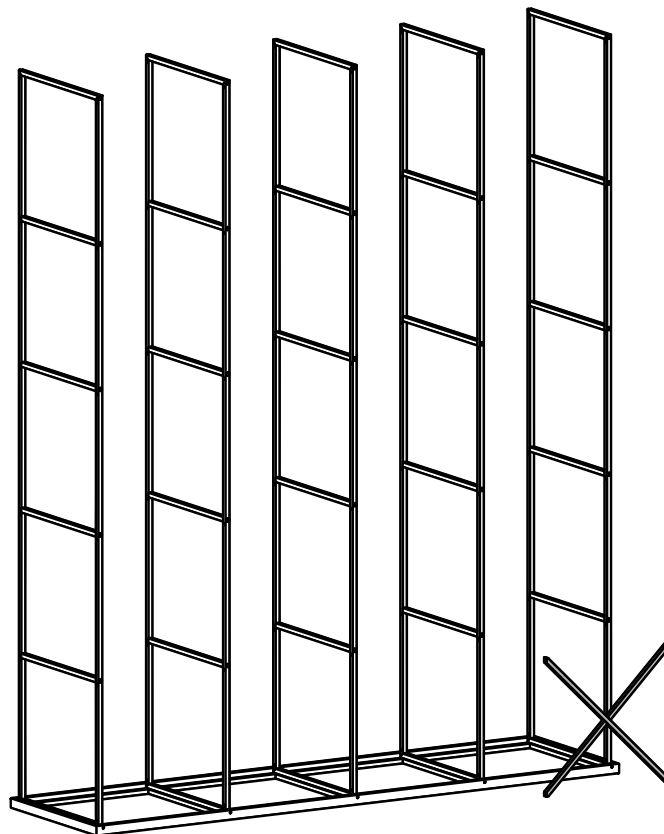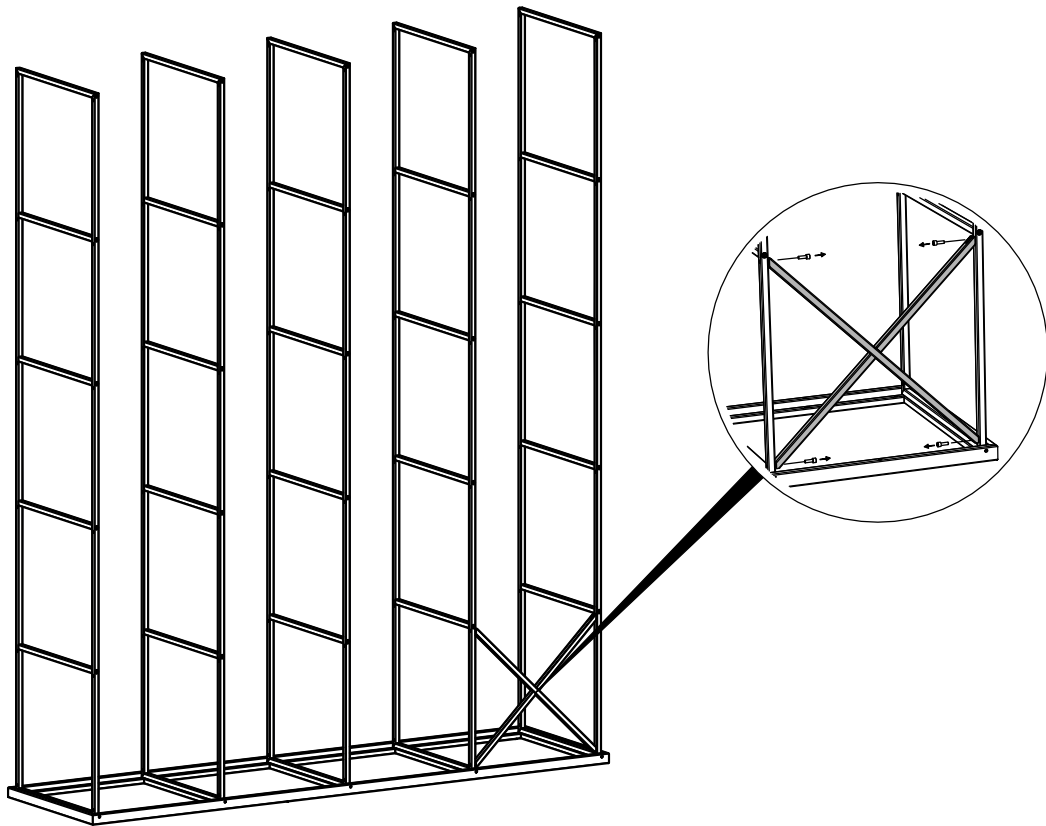


17

 
Front

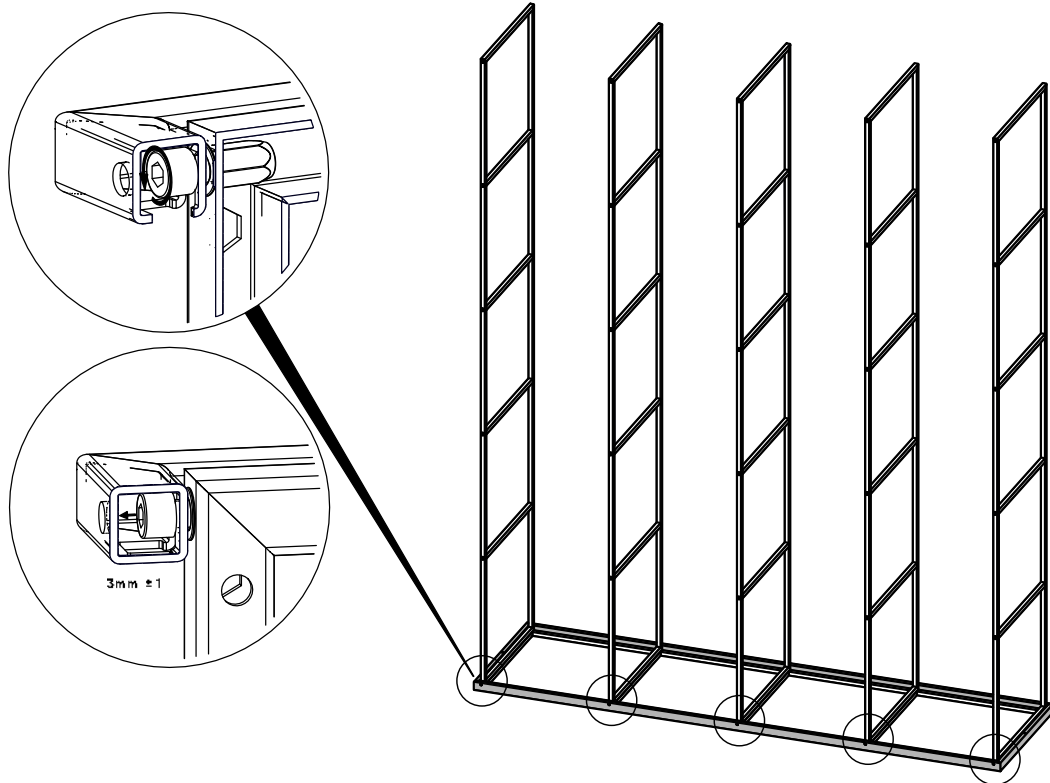


Back

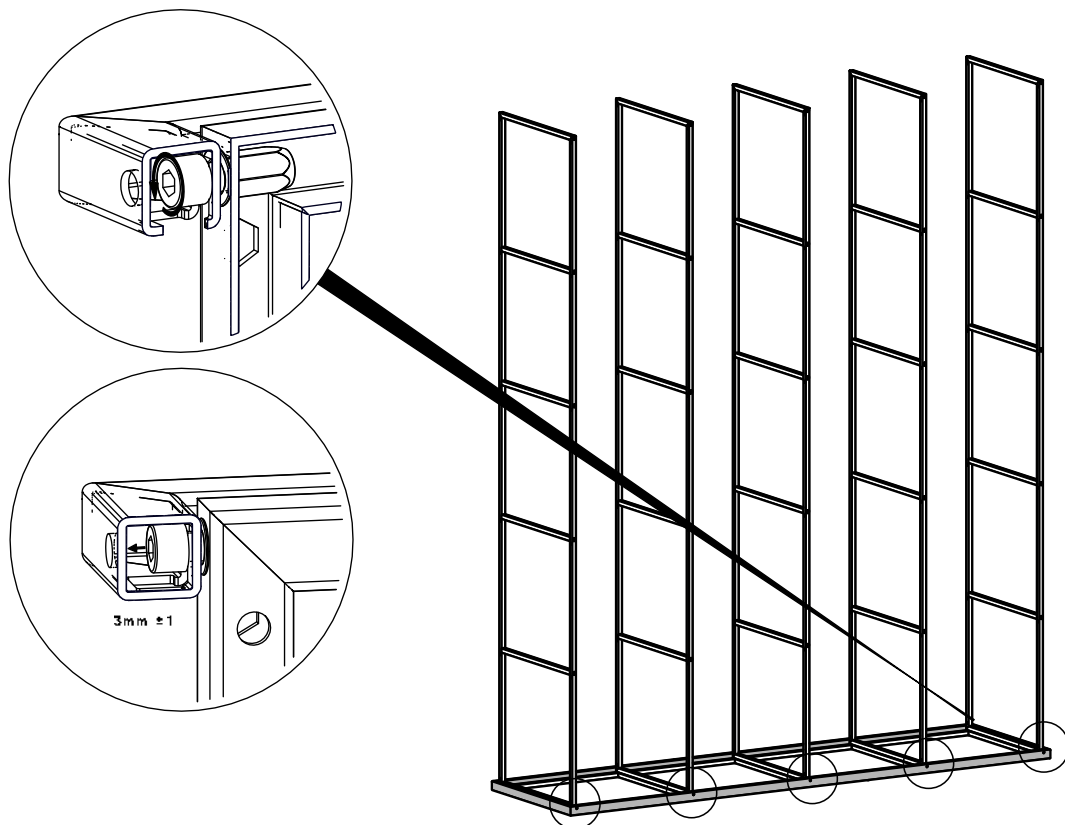 


18

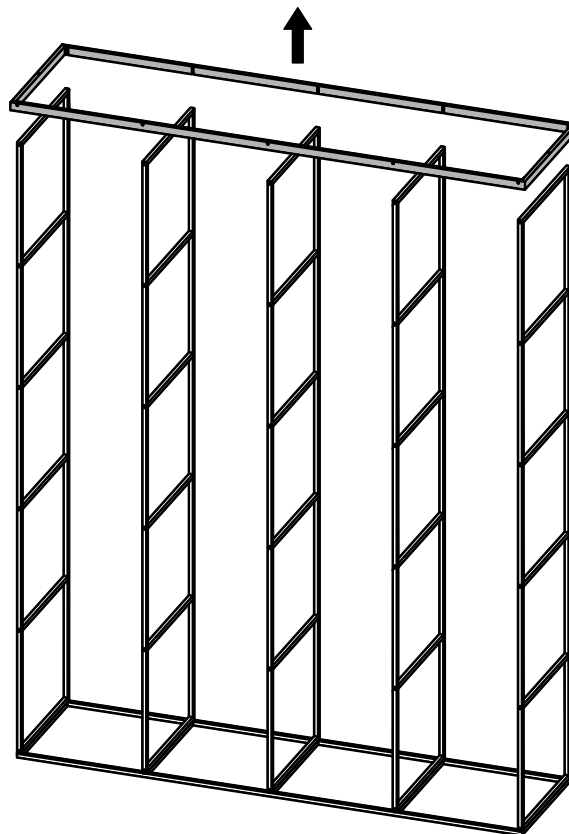 


19

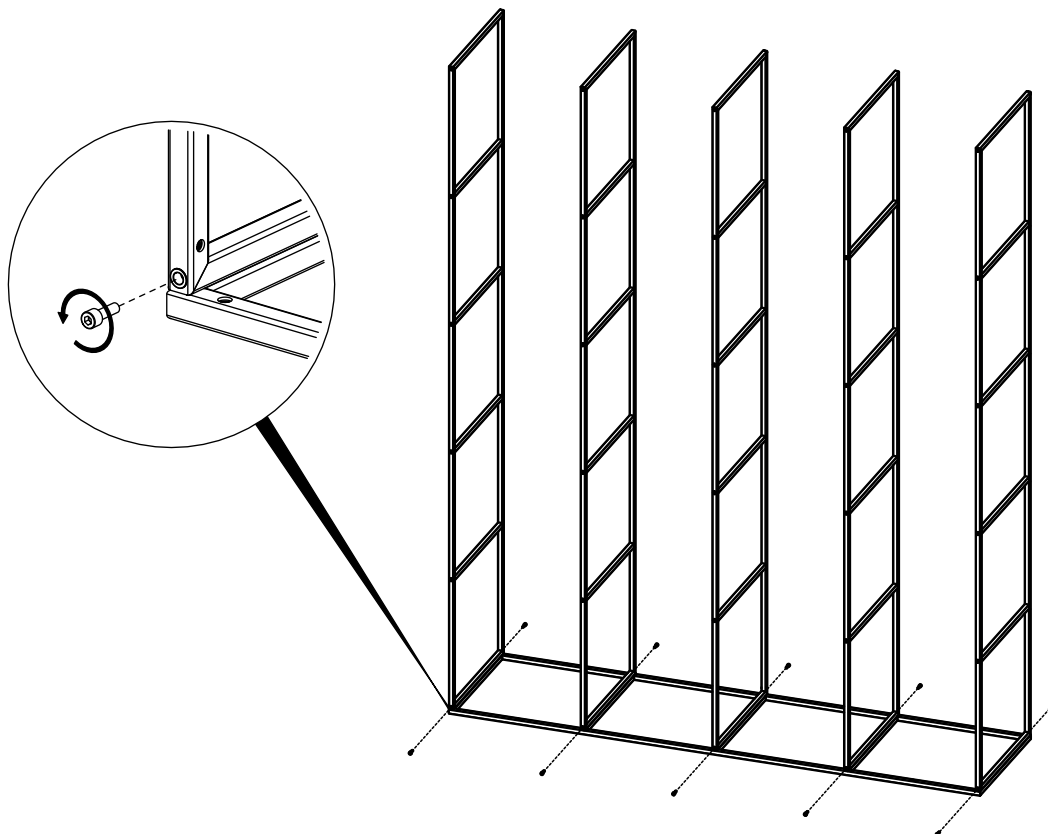 

20

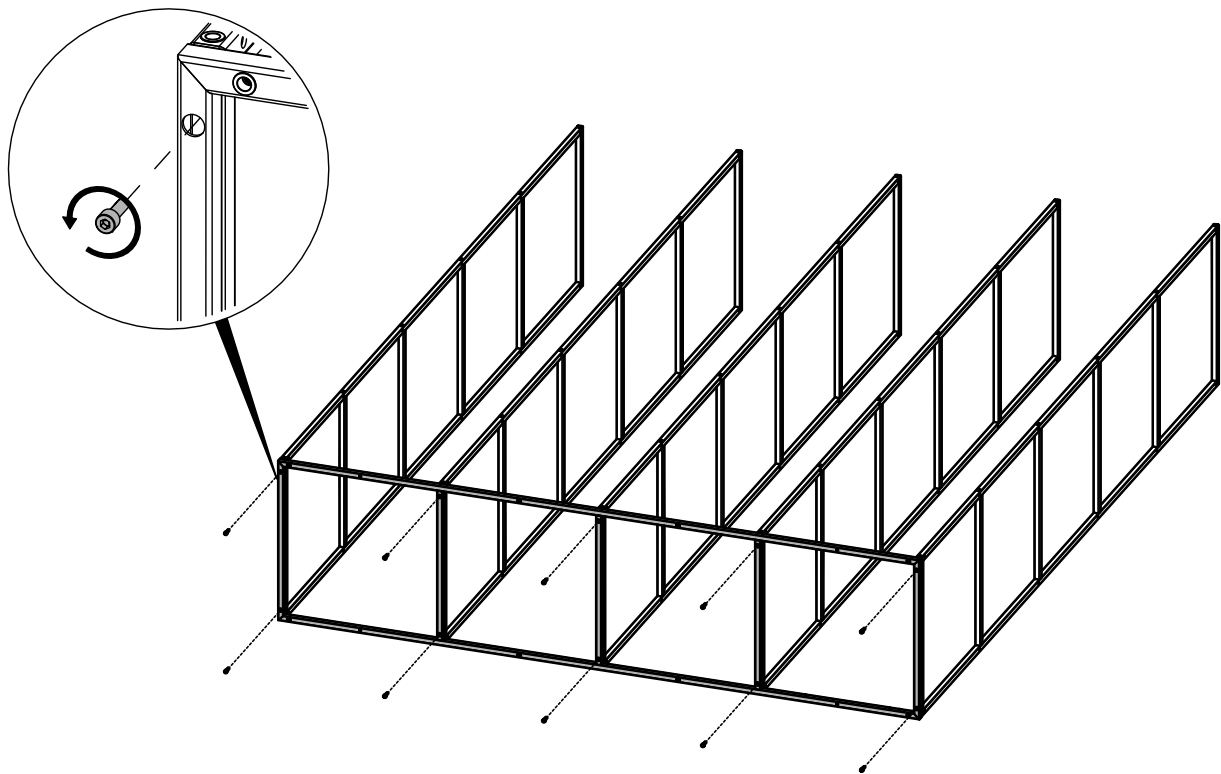 

21

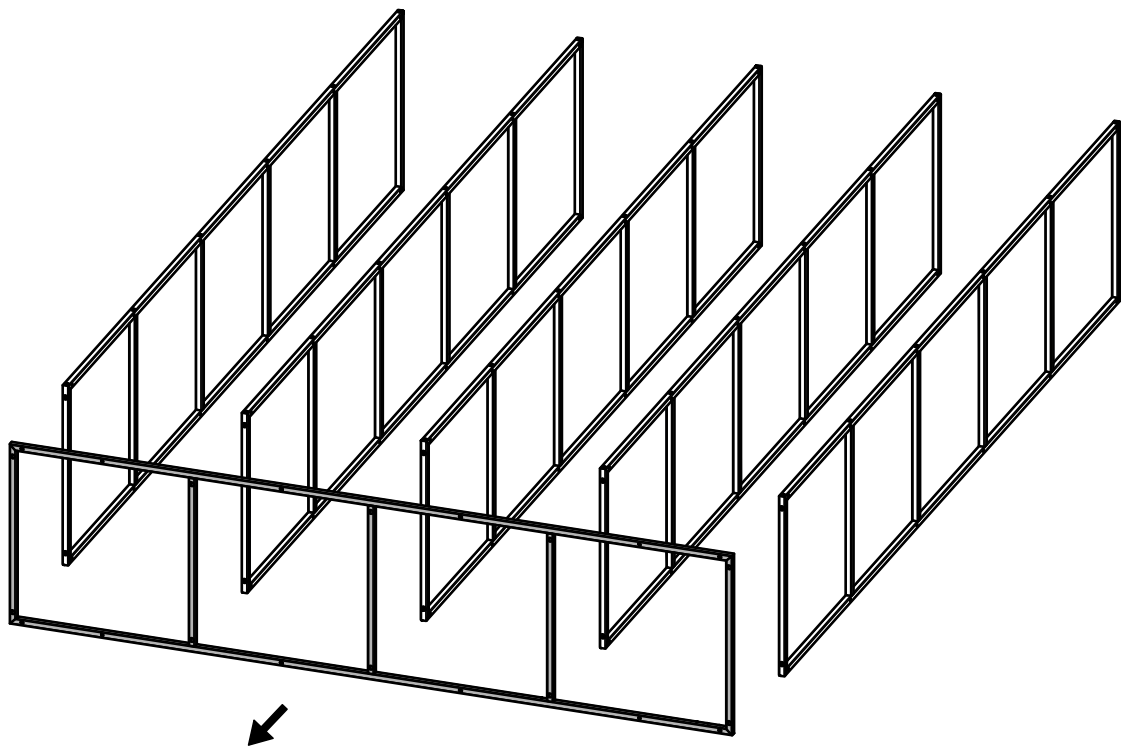 

Bejot Sp. z o. o.

ul. Wybickiego 2A, Manieczki, 63-112 Brodnica n. Poznania, POLAND

tel.: +48 (61) 281 22 25, e-mail: biuro@bejot.eu

www.bejot.eu

edition 08/2021